

# REMOTE CONTROL FUNCTIONALITY

## Backlighting

*The remote control is a motion detecting device and will backlight when the remote is picked up or moved.*

*Backlighting will remain on for 3 seconds.*

## Hot Keys



The following keys are dedicated to return the user to the OptiLink viewing environment independent of the content presently being viewed.

- 1 MENU:**  
Displays the OptiLink main menu
- 2 LAST:**  
Displays the last 15 items that have been watched
- 3 HOME:**  
Displays the main Android TV menu
- 4 GUIDE:**  
Displays the OptiLink Electronic Program Guide (EPG)
- 5 SHOWS:**  
Displays the shows that are presently available for viewing On Demand (VOD) from OptiLink
- 6 MOVIES:**  
Displays the movies that are presently available for viewing On Demand (VOD) from OptiLink

## Button Functionality



- 1 TV POWER:**  
Powers on or off TV/Audio System if remote is paired to TV/Audio System.
- 2 TV INPUT:**  
Changes video input on TV.
- 3 POWER:**  
Switches STB power on or into standby or off mode. May also control TV power and audio system after remote has been paired to the TV and Audio System.
- 4 PAGE (Up or Down):**  
In the GUIDE or MENU screens, scrolls one page up or down.
- 5 MENU:**  
Launches the MAIN MENU within OptiLink, with Live Video.
- 6 LIVE TV:**  
Tunes to the last content viewed in OptiLink App.
- 7 MUTE:**  
Mutes the audio on your audio device(s) (TV, Audio System, or STB).
- 8 VOLUME (Up or Down):**  
Increases or decreases volume levels on your audio device(s).
- 9 CHANNEL (Up or Down):**  
Selects the previous and next available channels. (Hold for rapid advance.) Within MENU or GUIDE acts the same as Page Up/Page Down.

- 10 GOOGLE HOME:**  
Launches AndroidTV main menu.
- 11 LAST:**  
Displays the last 15 items that have been watched.
- 12 BACK / EXIT:**  
Returns to previous menu or state within current App. From live video, this key opens the OptiLink Main Menu.
- 13 GUIDE:**  
Launches the Channel GUIDE (EPG) within OptiLink App.
- 14 ARROWS:**  
Moves to highlight items in respective direction.
- 15 OK / SELECT:**  
Confirms a selection. When watching video in OptiLink App, the information on the current video playing is brought up.
- 16 SHOWS:**  
Launches the SHOWS play list in the OptiLink App.
- 17 MOVIES:**  
Launches the MOVIES play list in the OptiLink App.
- 18 VOICE / SEARCH:**  
Currently, launches Search from the Google Home.
- 19 RECORD:**  
Begin recording selected content in the OptiLink App.
- 20 REWIND:**  
Fast rewinds VOD, or live TV.
- 21 FAST FORWARD:**  
Fast forwards VOD, or live TV.
- 22 PAUSE / PLAY:**  
Play or Pause toggle of VOD, or live TV.
- 23 0-9:**  
Enters channel numbers in the GUIDE or full screen video.
- 24 SET:**  
Setup the remote to control the TV, and to program an audio device.